

GAMERBOARD

IMPORTANT INFORMATION

Manual and Safety Instructions for Neodym-Magnets

- Strong magnets are not suitable for children under the age of 10 years.
- Danger for the digestive tract if swallowed. Very dangerous for children.
- Magnets carry current. Children could try to insert magnets in socket.
- Crushing hazard from strong magnets.
- If magnets are damaged danger from splinters.
- Magnets are dangerous for persons with a cardiac pacemaker.
- Magnets can damage hardware and electronic devices (like mobile phones, watches, etc.).
- Danger for drinking water and food from metal ions.
- Magnets can be dangerous for allergic persons. They contain among other things nickel.
- Do not heat magnets over 80° C.
- Drilling dust is inflammable.

 
Manual and Safety Instructions for the Board

- Apply the self adhesive felt to the lower side of the frame. Start with the longer one.
- Caution. The aluminium frame may leave marks or scratches on your table without the felt.
- Be cautious with the edges and corners of the board. Danger of cutting.
- Caution when closing the frame. Danger of crushing fingers.
- Insert grid foils centered in frame. They might be crumpled.
- Always insert the plain cover foil on top as protection.
- Insert foils with the side marked „UP“ upside.
- Only write on the side of the foils that is marked as „UP“.
- Clean foils after use. Long dried writing and marks may not be removed completely.
- Clean board and foils only with water a little bit of soap and soft cloth.
- Use solvents only after testing them on a small part on the edge of the sheet.
- The more foils and paper are between magnets and board the weaker the adhesion of the magnets gets.
- Use only whiteboard markers.
- Use the packing of the board as cover for your spare grid sheets.

Get accessories for the GAMERBOARD on GAMERBOARD.TP-media.at.

Instruction for Selfadhesive Felt for A2 and A1 Boards

Glue the self-adhesive felt to the lower side of the frame and the bottom of the board as shown below.



Instruction for A2 and A1 Grid Sheets

- Grid sheets are coated on the printed side (lower side). The coating is not solvent resistant. Handle with care.
- Writing with whiteboard markers on the coated side cannot be erased.
- The lower side is water-resistant as long as the water is wiped away immediately.
- Therefore always use grid sheets with the upper side up. Upper side is marked with "Up".
- You find the mark "Up" in one of the corners of the grid sheet.

